 
 


## IT SETUP GUIDE

If you have room above the cash drawer, do this: Plug in the mouse, keyboard, chip reader, scanner, and gift card swiper in to the dock and then run the USB-C charging cable through the hole in the cash wrap and plug in to the right side of the laptop where you see the lightning bolt. Run the power cables for the dock and chip reader down to the power strip/surge protector in the bottom of the cubby.

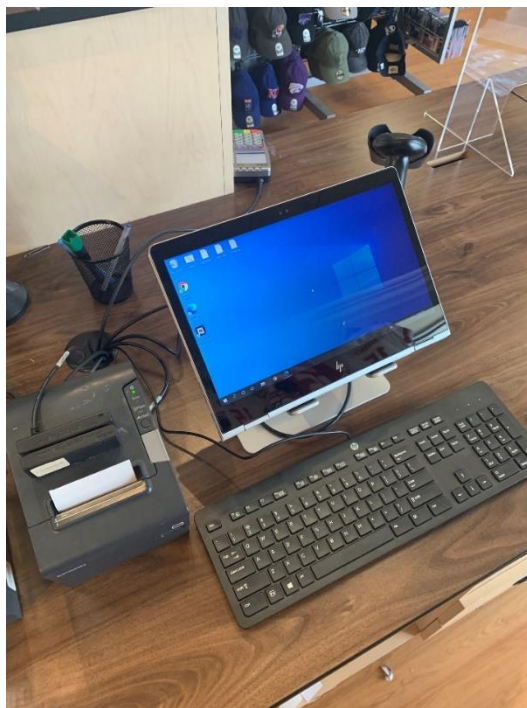

The Laptops we use should be flipped over so they can be used as a tablet on the laptop stand. There should only be one wire plugged into the laptop. The wire is a usb c charging and data cable that plugs into the dock.

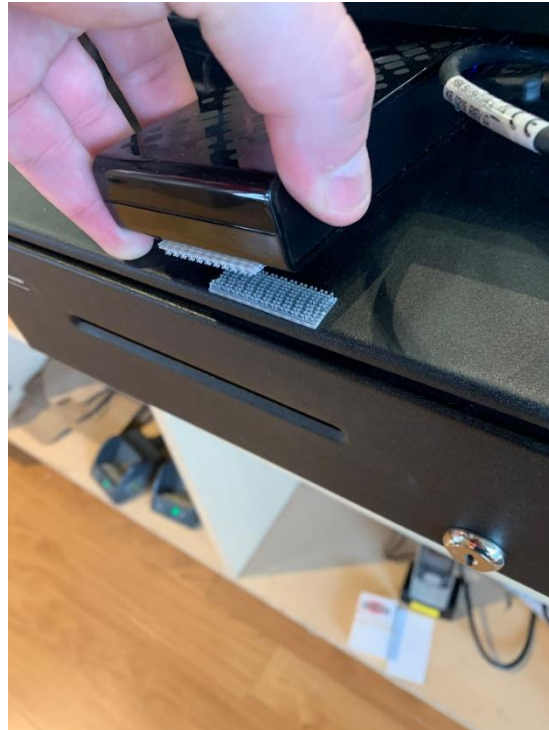