
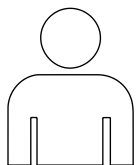



PIPE 4 WAY WITH TOPPER SHELF

Item # PI4WY473175H

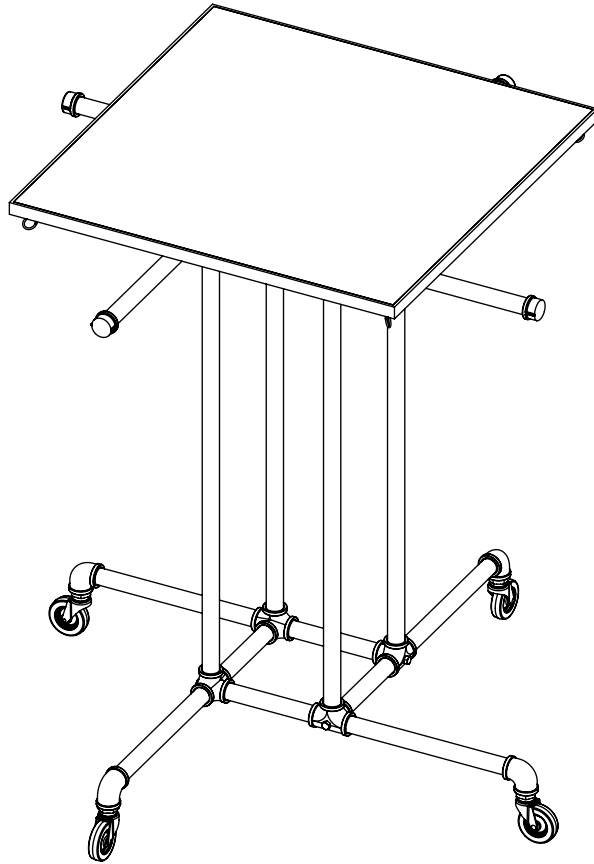


**2 PEOPLE
REQUIRED
FOR
ASSEMBLY**


INCLUDED HARDWARE




4X
3/8-16 x 1.5" LONG
HEX BOLT

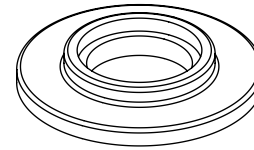

4X
FLANGE

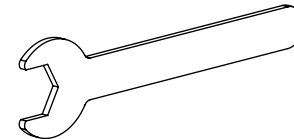


1X
WRENCH FOR HEX BOLTS



4X
3/8-16 x 2.5" LONG
HEX BOLT



4X
#10 X 5/8" CSK
WOOD SCREW




4X
CUP HOOK

TOOLS REQUIRED

POWER DRILL/ SCREWDRIVER

1

ASSEMBLE CASTER TO UPRIGHT.


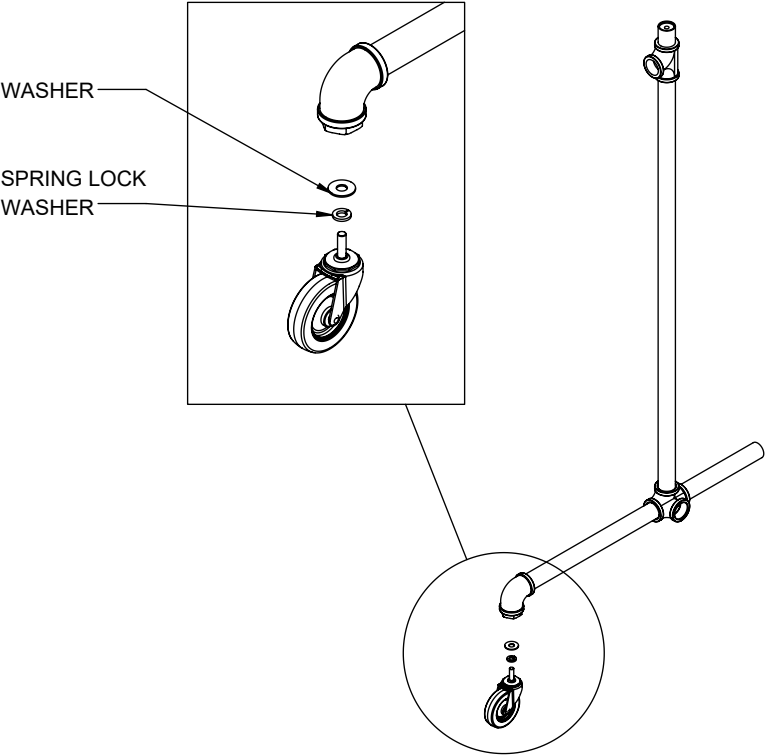


2A

ASSEMBLE (2) UPRIGHTS TOGETHER.
REPEAT FOR SECOND SET OF (2)
UPRIGHTS.

2B

ASSEMBLE UPRIGHTS FROM STEP 2A
TOGETHER.

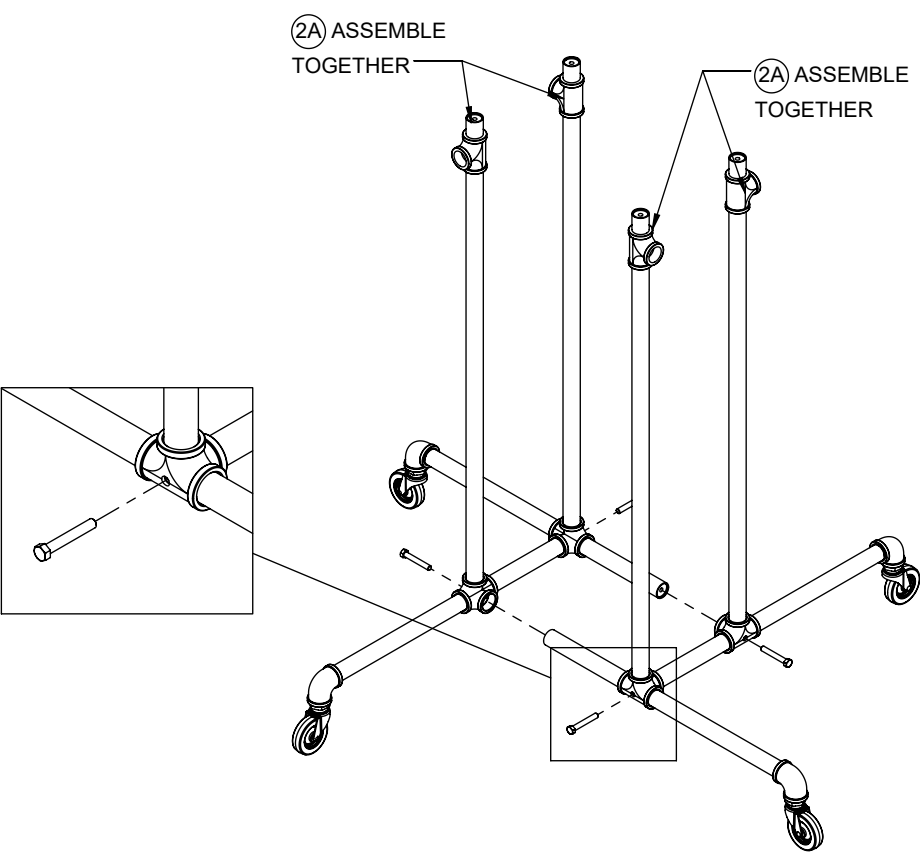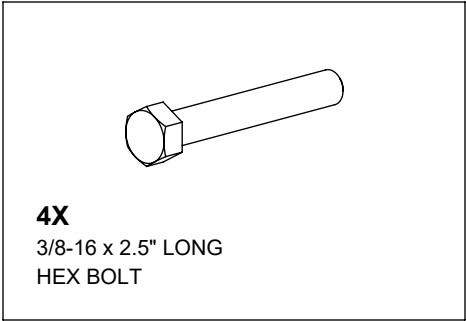

3




PLACE FLANGES ON TOP OF UPRIGHTS.

PLACE SUPPORT PLATE ON TOP OF FLANGES. MAKE SURE COUNTERSUNK HOLES FACE TO THE BOTTOM.

SCREW THRU THE TOP OF THE SUPPORT PLATE INTO THE UPRIGHTS.

4X

3/8-16 x 1.5" LONG
HEX BOLT

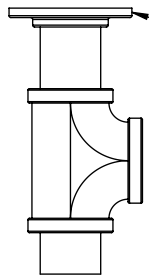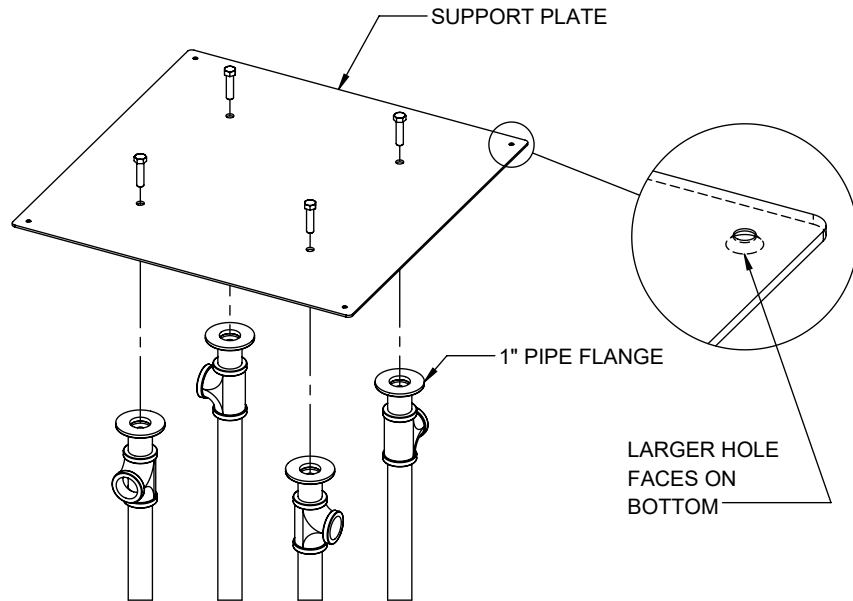

NOTE: FLANGE SITS LIKE THIS
ON TOP OF THE PIPE.

THERE IS A GROOVE ON THE
BOTTOM OF THE FLANGE THAT
THE PIPE FITS INTO.

4

PLACE WOOD TOP OVER THE FRAME.
MAKE SURE THE HOLES ON THE WOOD
TOP ARE FACING DOWN.



ALIGN HOLES ON WOOD TOP WITH
HOLES ON SUPPORT FRAME.

THEN WITH SCREWDRIVER OR POWER
DRILL, SECURE WITH WOOD SCREWS.



4X

#10 X 5/8" CSK
WOOD SCREW

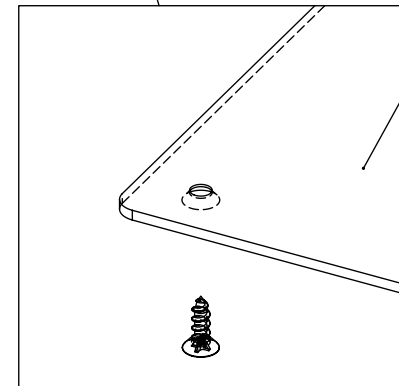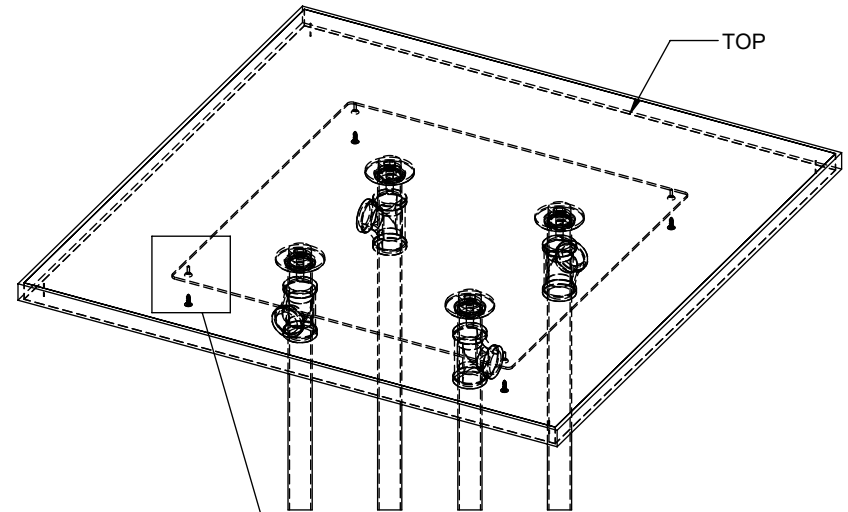




5

FIND THE PILOT HOLES ON EACH CORNER.

BY HAND, SCREW IN CUP HOOKS UNTIL THEY ARE ROTATED ABOUT 45 DEGREES.

NOTE: MAKE SURE THAT THE HOOK FACES TOWARDS INSIDE.


4X
CUP HOOK

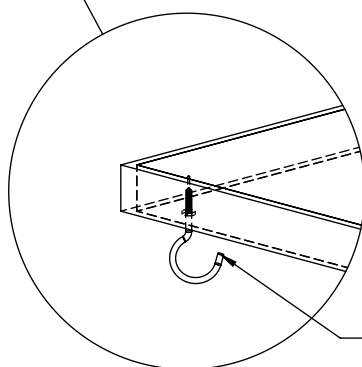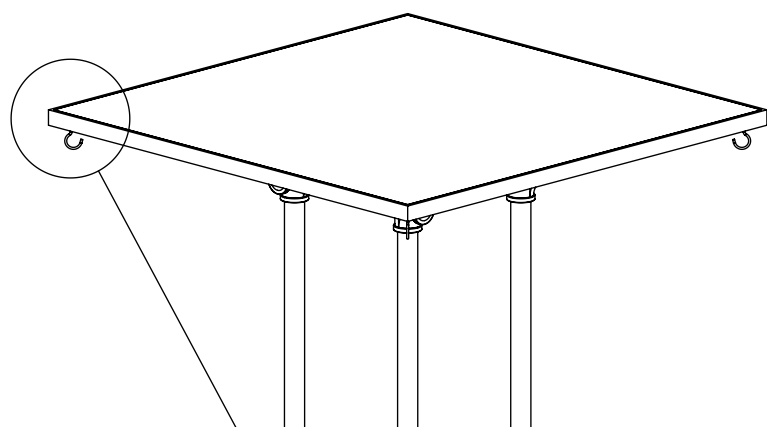

HOOK FACES INSIDE

6

SCREW IN THE FACEOUTS.
(TOP AND SUPPORT PLATE
HIDDEN FOR CLARITY)

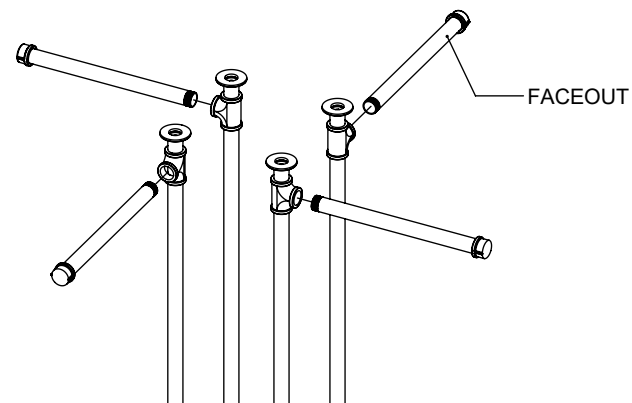

7

ASSEMBLY IS COMPLETE.

